


# DIRECT DRIVE HYDRAULIC MOTOR BELL HOUSINGS

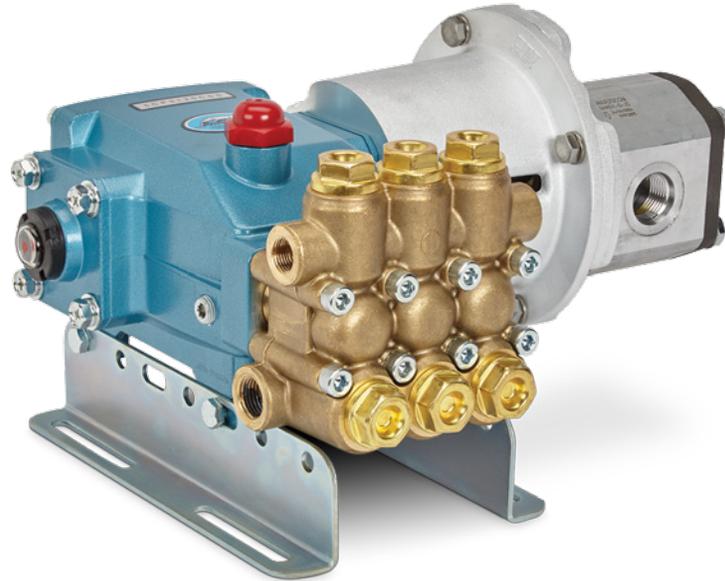

## Bell Housings for Hydraulic Motors Provide Assembly Convenience

Cat Pumps bell housings offer a fast and convenient way to mount hydraulic motors to high-pressure pumps in a direct-drive configuration. Bell housings are designed to accept SAE "A" and SAE "B" mounts to fit a variety of pumps rated to 10.5 gpm and 5,000 psi. Bell housings are available as individual components or assembled as a complete pump/motor assembly. Take advantage of Cat Pumps off-the-shelf service for this highly convenient line of hydraulic motor bell housings.

### Features

- Optimal alignment reduces side-loading for longer life, trouble-free operation
- Compact direct mounting reduces space requirement
- Cast from lightweight, high-strength aluminum alloy
- Ease of assembly reduces fabrication costs
- Slotted housing allow easy access to coupler set screws
- Available as a complete drive package for convenient assembly

### Applications

- Hydroexcavation
- Jetting
- Washdown Systems
- Agriculture Injection
- Methanol Injection
- Many other applications powered by hydraulic motors

See our complete line of bell housings and other accessories at [www.catpumps.com](http://www.catpumps.com)

